



1




2

**CAUTION:** Before assembling, clear any loose debris from the ground surface to prevent scratching the tabletop.



3

Flip upside down and attach the micro-adjust feet to all 4 corners.

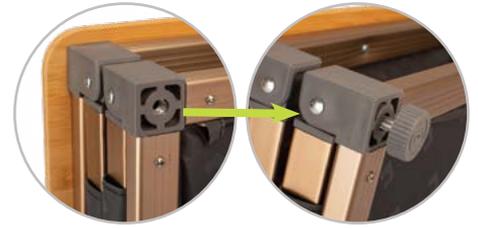


4

Lay the table flat on its feet and extend the panel.



5

Pull the leg outwards until it clicks into place. Repeat on all 4 legs. Be aware of pinch points!

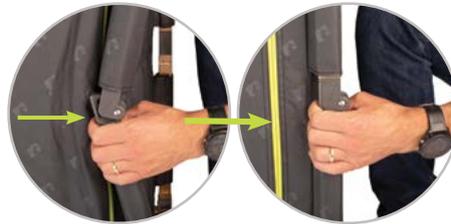

6

Fully extended.




7

Open and fold the door before securing it with the velcro strap. **Note:** Two shelves inside.



8

Place one shelf on the top fabric holder.

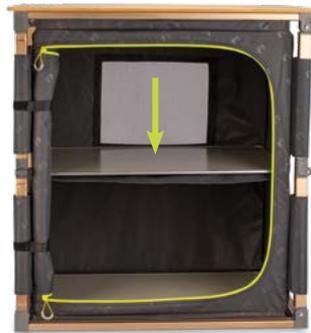


9

Ready to use.



A

**Feature:** Utensil rack with detachable hooks or used as a bin holder.

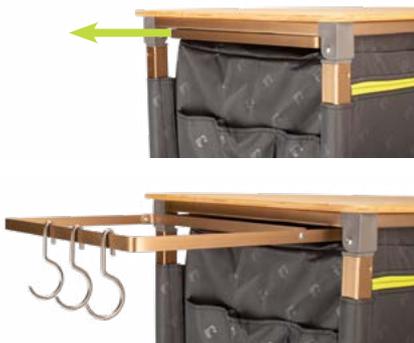


B



**Feature:** Eco Kitchen Kit attachment.



C

**Feature:** Storage pockets.

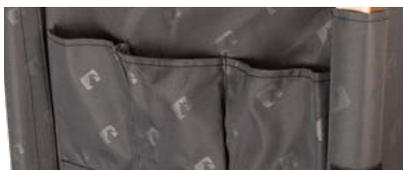

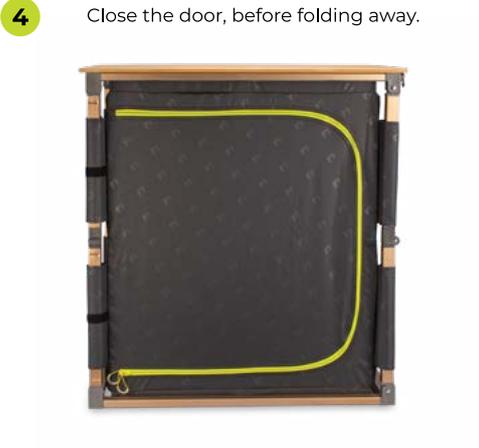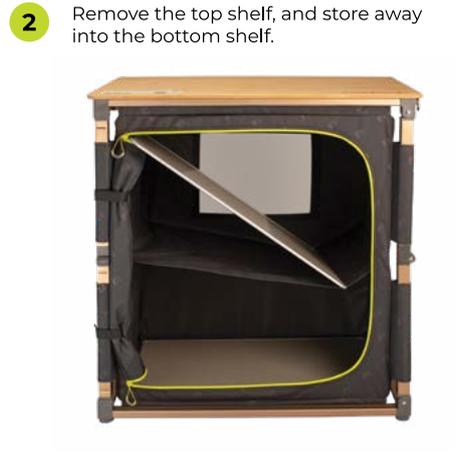

**2 Year Limited Warranty**

We take pride in the quality and design of every ZEMPIRE table or cupboard, that's why our TABLES & CUPBOARDS come with a strong guarantee designed to protect you as our valued customer. ZEMPIRE will repair or replace this product, should it fail due to faulty materials or manufacture for a period of 2 years from the date of purchase.

For a full explanation of what is covered under this warranty please refer to our website [www.zempire.co.nz/warranty](http://www.zempire.co.nz/warranty).

**Care & Safety information:**

- Do not stand on your cupboard.
- Be gentle with zips; always use two hands to close the zip; do not force it if zip gets caught.
- Do not use near open flame.
- Clean thoroughly after each use. Wash by hand with warm water and a soft towel or sponge.
- Do not use harsh cleaning chemicals.
- Leave the cupboard to dry out completely before putting it away.
- Do not keep the cupboard in direct sunlight or leave it in the rain.
- Store away from chemicals and moisture.
- In case re-coating is required; sand lightly with an extra fine-grit sandpaper. Reseal surface with a few coats of wood sealer product for ample water protection.