



PACKING AWAY YOUR TENT

- 1) Open up all windows and close all doors.
- 2) Remove the **RED** awning poles
- 3) Remove the **YELLOW** Support poles
- 4) Remove the **BLACK** Ridge poles
- 5) Remove the **BLUE & GREEN** Eve poles.
- 6) Remove all pegs, clean and place in peg bag
- 7) Lay tent as flat as possible and fold the awning over main body of the tent.
- 8) Fold both sides into the centre of the tent




- 9) Fold in half. Ensure the width is the same as the length of your carry bag. Adjust if necessary



- 10) Expel as much air as possible by walking down the tent towards the door

- 11) Roll the tent from the rear towards the door. Ensure that you wipe off any condensation and dirt as you roll



1. Ensure guy ropes are pegged out at all times during use
2. Never pack your tent away wet. If you must take your tent down when wet, ensure that you dry your tent completely as soon as possible to prevent mildew forming.
3. If mildew does form on your tent wash off with warm water and a soft brush to prevent further growth. Do not use detergents.
4. Do not use an open flame inside your tent. The fabric has been treated with a fire retardant but is in no way fire proof
5. Clean all pegs and poles before storing
6. This tent is not designed to withstand storm conditions. During strong winds, it is recommended that the tent be taken down
7. Do not leave your tent pitched unnecessarily for extended periods of time. UV light damages the fly fabric and will shorten the life of your tent

Flow Imports Ltd General Warranty

Subject to the exclusions and limitations set out below, Flow Imports Ltd will repair or replace (at its choice) merchandise supplied by Flow Imports Ltd (Goods) which fail due to faulty materials and manufacture during the warranty period.

The following exclusions and limitations apply to the Warranty:

The Warranty does not apply except to an original purchaser who purchased Goods new from a retail outlet.

The Warranty does not apply if:

- (a) a different product specific warranty is provided by Flow Imports Ltd; or
- (b) the Goods are not made by Flow Imports Ltd and an express warranty is provided by the maker of the Goods

The Warranty does not apply if the Goods have been used other than for reasonable personal camping use. Use in a commercial context (e.g. for rental or use by a commercial organization in its business operations) or continuous use in a domestic context are expressly excluded.

Damage due to reasonable wear and tear, accident, acts of God, negligence (other than by Flow Imports Ltd), failure by the purchaser to ensure instructions for use and care are observed, deterioration due to abnormal exposure to the elements, insect or mildew attack, or any other cause reasonably beyond the control of Flow Imports Ltd are all excluded.

Goods must be returned by the purchaser to the outlet from where they were purchased within the Warranty period, in a clean state with proof of purchase. All transport cost and any other indirect costs are excluded from the Warranty.


Flow imports Ltd reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Warranty.

The Warranty does not limit, modify or exclude any rights under any law if to do so would contravene that law or make any part of this Warranty invalid. However, Flow Imports:


- (a) Excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
- (b) Limits its liability for breach of any such condition or warranty that it cannot exclude together with its liability under Warranty, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replace (at Flow Imports' option).

This tent design is under copyright protection by Flow imports Ltd. The Zempire Logo and related Campfire mark are registered trademarks of Flow imports Ltd, New Zealand. Any reproduction of this manual is prohibited without prior consent by Flow imports Ltd


Zempire[®] **TITAN**
BY **FREEDOM CAMPING** **CANVASSERIES**

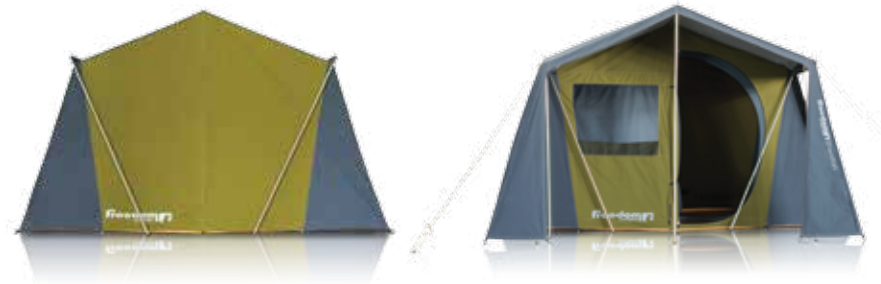


POLE DIAGRAM - TITAN

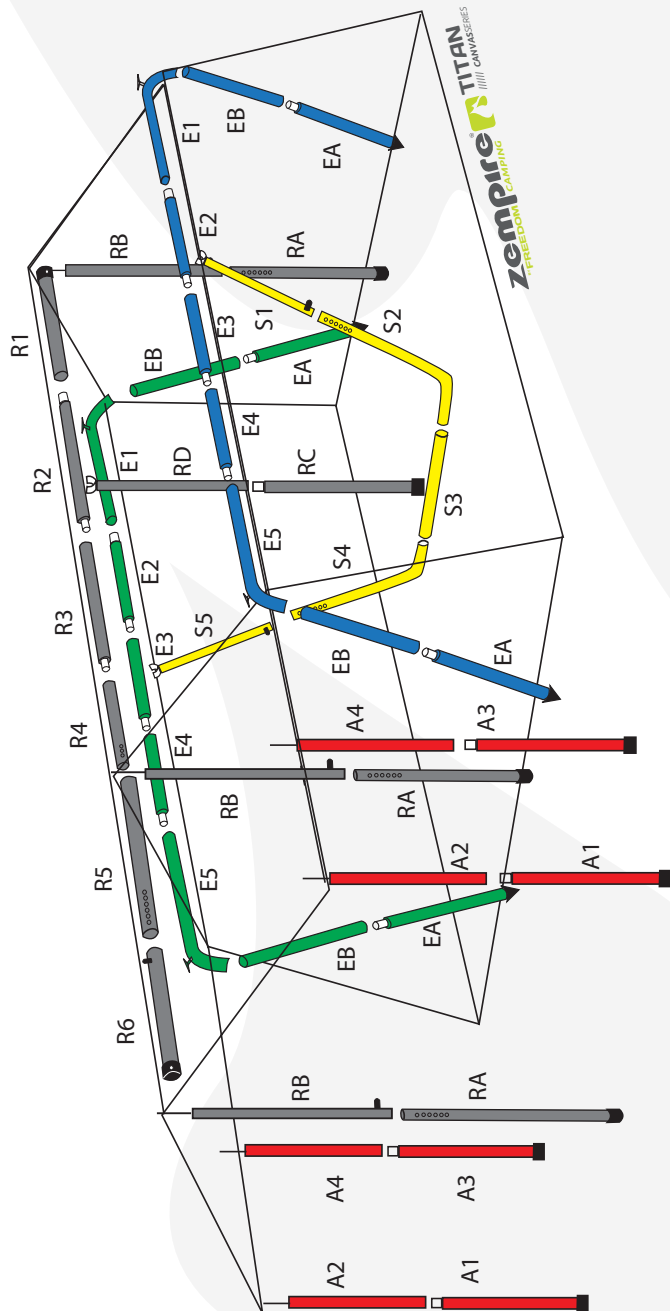


25) Guy out the front awning by attaching the short guy ropes over top of awning pole spikes. Line up the guy rope with the pole spike and the top ridge pole spike (indicated by the - - - Line). Ensure the guy rope is at a 45° angle and pegs are also inserted at a 45° angle.

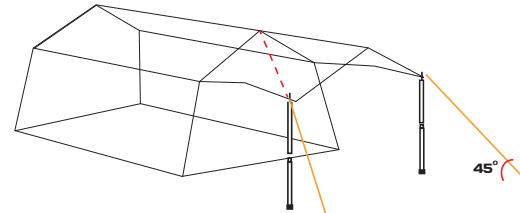


26) Insert the longer **RED A3/A4** poles into the centre of either side of the awnings. Guy out at a 45° angle with the longer guy rope sections.

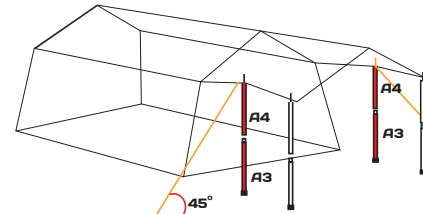

27) Peg out the front valance. The bottom of the valance should sit level with the ground. The outside of the valance should align with the outside of the tent. The inside of the valance should be vertical.

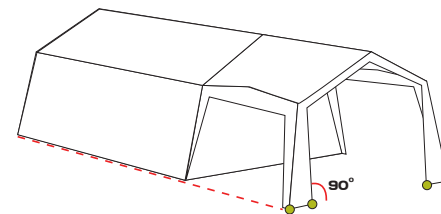


28) Place rubber pole feet under support pole (**BLACK RA & RC**)

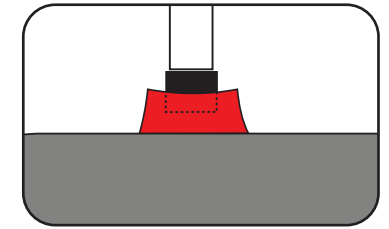

CARING FOR YOUR TENT



- Never store your tent wet.
- If you must pack your tent down while still wet, hang to dry as soon as possible to prevent mildew damage.
- Remove dirt, tree sap, and bird droppings with a soft brush and warm water before packing down.
- Do not use detergents to clean your tent. This will damage the waterproofing of the tent fabric.
- When rolling up your tent ensure there is no condensation on the floor.
- If you do get mildew forming on your tent, remove the pours with warm water and a soft brush to prevent further growth.
- It is not advisable to re-coat your canvas as a precautionary measure. This will reduce the breathability and durability of your tent. Freedom Canvases are pre coated and will stay waterproof and breathable for many years.
- When Storing your tent over the winter, do not store directly on concrete floors.

18) Place the **YELLOW** pole sections **S2** to **S4** behind the centre dividing wall.

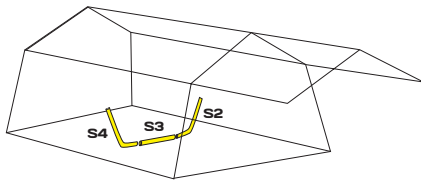


19) Insert open end of the **YELLOW** **S1** pole through the pole sock half way along the RH outside wall. Attach the C Clip to the **BLUE** eve pole and lift the pole sock so it sits under the pole sleeve

Repeat with the **YELLOW** **S5** pole attaching to the **GREEN** eve pole.

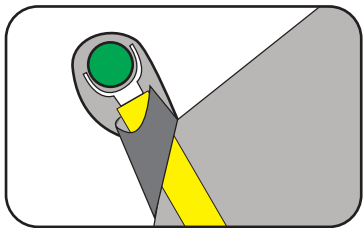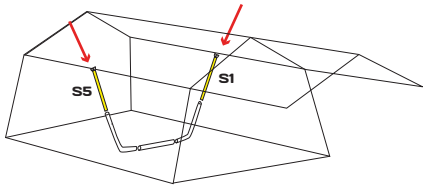


20) Insert the **YELLOW** **S1** pole into the end of the **S2** pole. Repeat with **S5** into **S4**. Extend both sides by inserting the button clips into the matching hole.


21) Insert **BLACK R6 / R7** pole into the end of the **R4** pole that extends through the pole sock at the front of the tent.

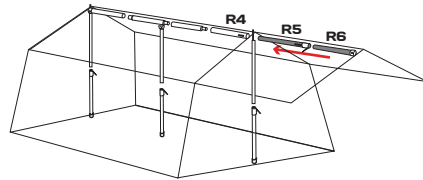


22) Insert the **BLACK RB/RA** pole into the hole at the end of the **BLACK R6** pole and then through the eyelet at the end of the awning. Extend by pressing down the button clip.

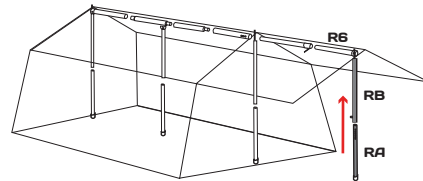

23) Extend the **BLACK R5/R6** pole until the awning is tight. You may need to lower the pole by moving the support poles to the side.

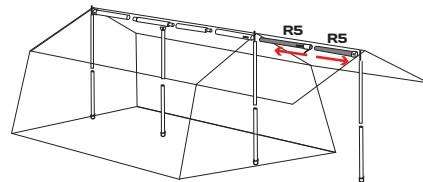

24) Insert the **RED A1/A2** poles into the eyelets at the front corners of the awning.

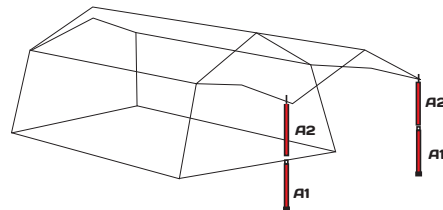

POLE CHART

Ridge Pole (BLACK)

Line 1 - R1 , R2, R3, R4
Line 2 - R5, R6,
Line 3 - RA, RB
Line 3 - RA, RB
Line 4 - RC, RD

LH Eve Pole (GREEN)

Line 1 - E1 , E2, E3, E4,
Line 2 - E5
Line 3 - EA, EB
Line 4 - EA, EB

RH Eve Pole (BLUE)

Line 1 - E1 , E2, E3, E4,
Line 2 - E5
Line 3 - EA, EB
Line 4 - EA, EB

Support Pole (YELLOW)

Line 1 - S2, S3, S4
Line 2 - S1
Line 3 - S5

Awning Pole (RED)

Line 1 - A1, A2
Line 2 - A1, A2
Line 3 - A3, A4
Line 4 - A3, A4

Pegs	32
Spike Washers	7
Pole Feet	3
Guy Rope 4m	2
Guy Rope 3m	4

WEATHERING YOUR TENT

When you first get your new tent you will need to weather it. This is a process of soaking the fabric to ensure that all the thread swells up filling stitch holes and creating a watertight surface.

When you pitch your tent for the first time soak the fabric with a garden hose until the fabric looks visibly damp. Allow to dry and repeat for two or three times.

Your tent will get more watertight the more you use it. Do not be concerned if you have a small amount of water coming through the seams on the first few times you get heavy rain.

NATURAL FIBRE

Freedom Canvas is made of a combination of Natural Cotton for breathability and water fastness and Polyester for strength.

Please note that as Cotton is a natural fibre you will notice variances of both colour and thickness of the thread. This is normal and is a characteristic of a natural and breathable fibre.

FIRE RETARDANT


Zempire Canvas Tents are naturally fire retardant. While this significantly reduces the risk of the fabric catching in fire, it is by no means fireproof. Ensure open flames are kept well away from your tent at all times.

1) Clear your site making sure there are no sharp objects. Try to choose a site that is flat and clear.


2) Sort the poles into their matching colour. Once sorted, connect each colour pole length together as per the pole chart.

3) Spread your tent out with floor facing down. The front is the end with the large awning roof attached.

4) Peg out the four corners of the tent. Pull the floor as tight as possible. To ensure the floor sits flat it may be easier to peg in the following sequence. Pegs should be at a 45° angle away from the tent for greatest hold.

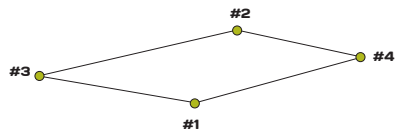


5) Peg out the remaining peg points ensuring the floor sits flat.




6) Open all doors and windows. This allows air to enter the tent and makes pitching easier


7) Thread the **BLUE** poles (**E1** to **E4**) through the pole sleeve that runs along the RHS of the tent. Thread the poles from the rear of the tent inserting the pole through the black webbing loop before threading through the pole sleeve and place behind the button pin on the pole.

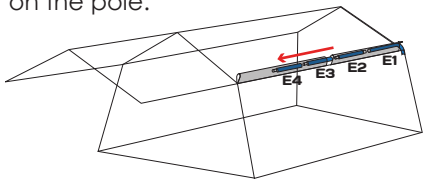


8) At the front of the tent thread the **BLUE E5** pole up through the pole sock on the side of the front awning from the inside to the outside. Thread through the Black webbing loop before inserting into the pole sleeve and connecting to the **E4** pole. Pull the webbing over the button pin on the pole.

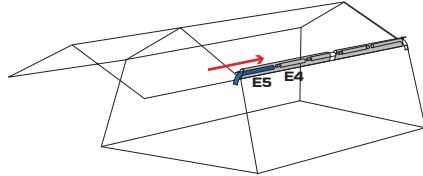


9) Cover the pole by wrapping the end of the pole sleeve over the pole sock and attach the Velcro.

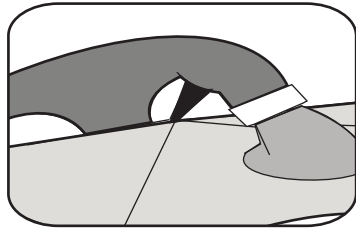


10) Repeat with the **GREEN** pole

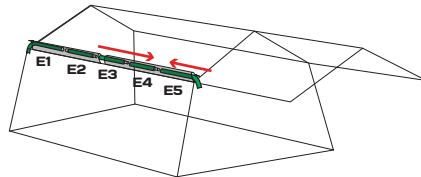


11) Insert the remaining **BLUE EA** and **EB** poles into the end of each section and raise the pole so that the outside wall sits taught. You will need two people to do this.

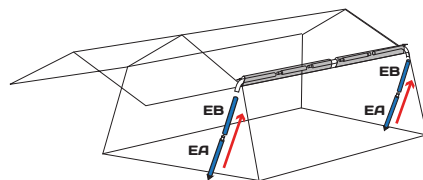



12) Repeat with the **GREEN EA** and **EB** poles.

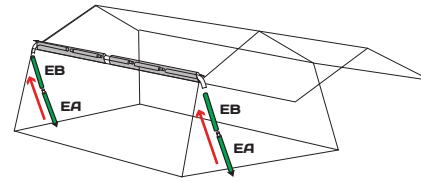


13) Thread the **BLACK R1** to **R4** poles inside the tent by threading through the pole sock at the top of the front wall and opening at the top of centre dividing wall.

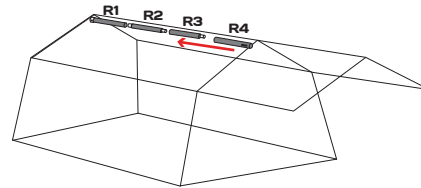


14) Insert the **BLACK RB/RA** pole into the hole at the end of the **R1** pole and then through the eyelet at the rear of the roof. Extend until the wall sits tight. Attach the Velcro strips on the rear wall.

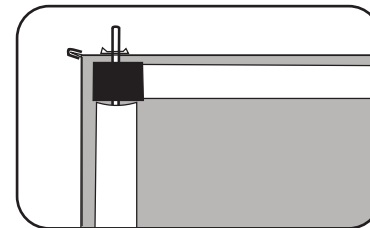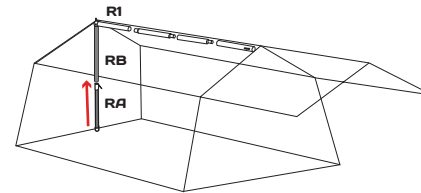

15) Repeat with the second **BLACK RA/RB** pole at the front of the tent. Thread the **RB** pole through the outermost of the 3 holes on the **BLACK R4** pole. If the roof is too tight move back one hole before threading through the eyelet in the roof. Ensure the end of the **BLACK R4** pole extends out the pocket on the front wall. Attached the Velcro strips on the front wall around the pole

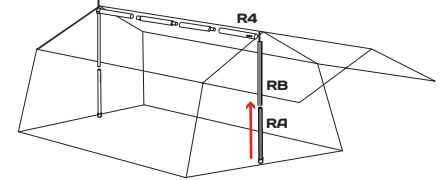

16) Place white "Witch Hat" washers onto pole spikes of both **RB** poles to prevent water running down during heavy rain.

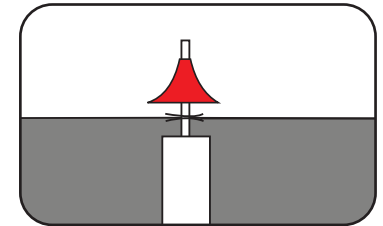

17) Connect the C Clip at the top of the **BLACK RC/RD** pole to the **BLACK** ridge pole directly behind the centre dividing wall and extend until the wall is taught. Attach the Velcro strips on the Dividing wall around the pole.

